

SMART Board on Extend Fix

Put your computer on extend screen. Press the orientation button (target/crosshair) on the pen tray once to open the orientation screen on the main monitor, then press the space bar to move the orientation screen to the extended monitor. Orient the board, and it will now write on that screen.